


Connect the Wheel Alignment Frame via Wi-Fi


1

Turn on the MaxiSys tablet. Tap the **Settings** application on the MaxiSys Job Menu.

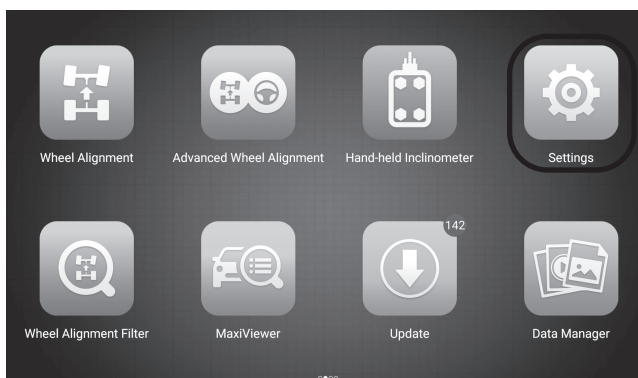

2


Tap **Wheel Alignment Settings** on the left column. Select **Wheel Alignment Frame Connection** to enter the screen.

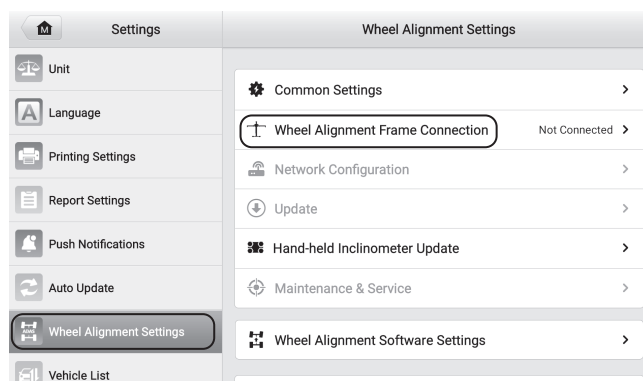

3

Tap the Wi-Fi toggle switch to enable Wheel Alignment Wi-Fi. The tablet will search for available units. The Wi-Fi name of the frame will be "ADAS", suffixed with a serial number. Tap the appropriate unit to connect. When a connection is established, the connection status reads "Connected".


NOTE: It may take up to 30 seconds to connect the tablet to a wheel alignment frame. Please wait patiently.

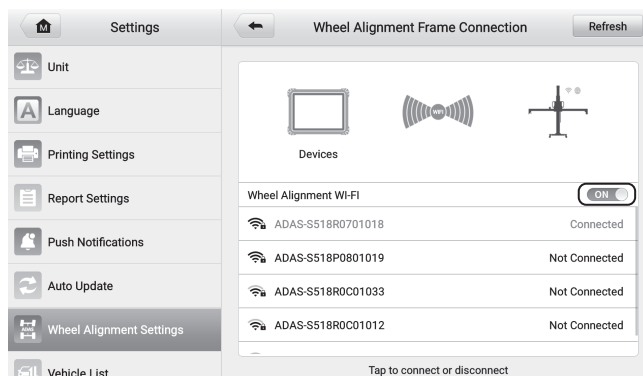

Connect the MaxiSys Tablet to Your Wi-Fi Network


1

Tap **Settings** > **Wheel Alignment Settings** and select **Network Configuration** to enter the screen.

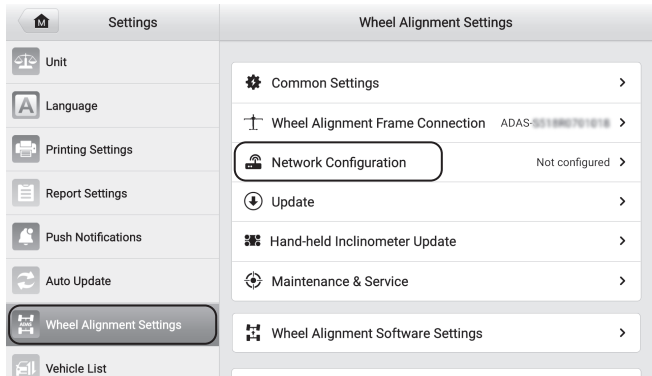


2

Tap the dropdown list. Select your Wi-Fi network and enter your password when prompted.

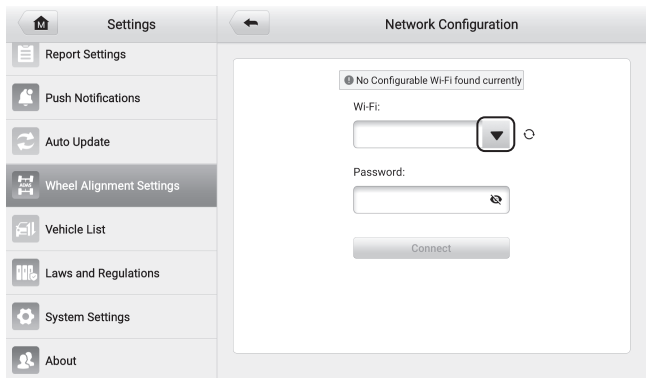


3

Tap the **Connect** button to connect to the selected Wi-Fi network. Once connected successfully, a confirmation message will appear.

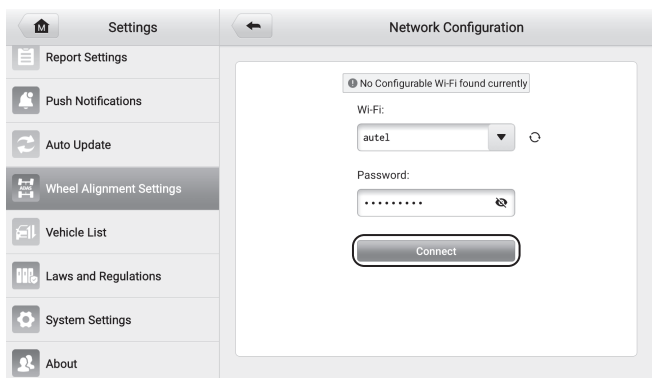

NOTE: The illustrations in this Quick Reference Guide are for reference only. The actual screens may differ.

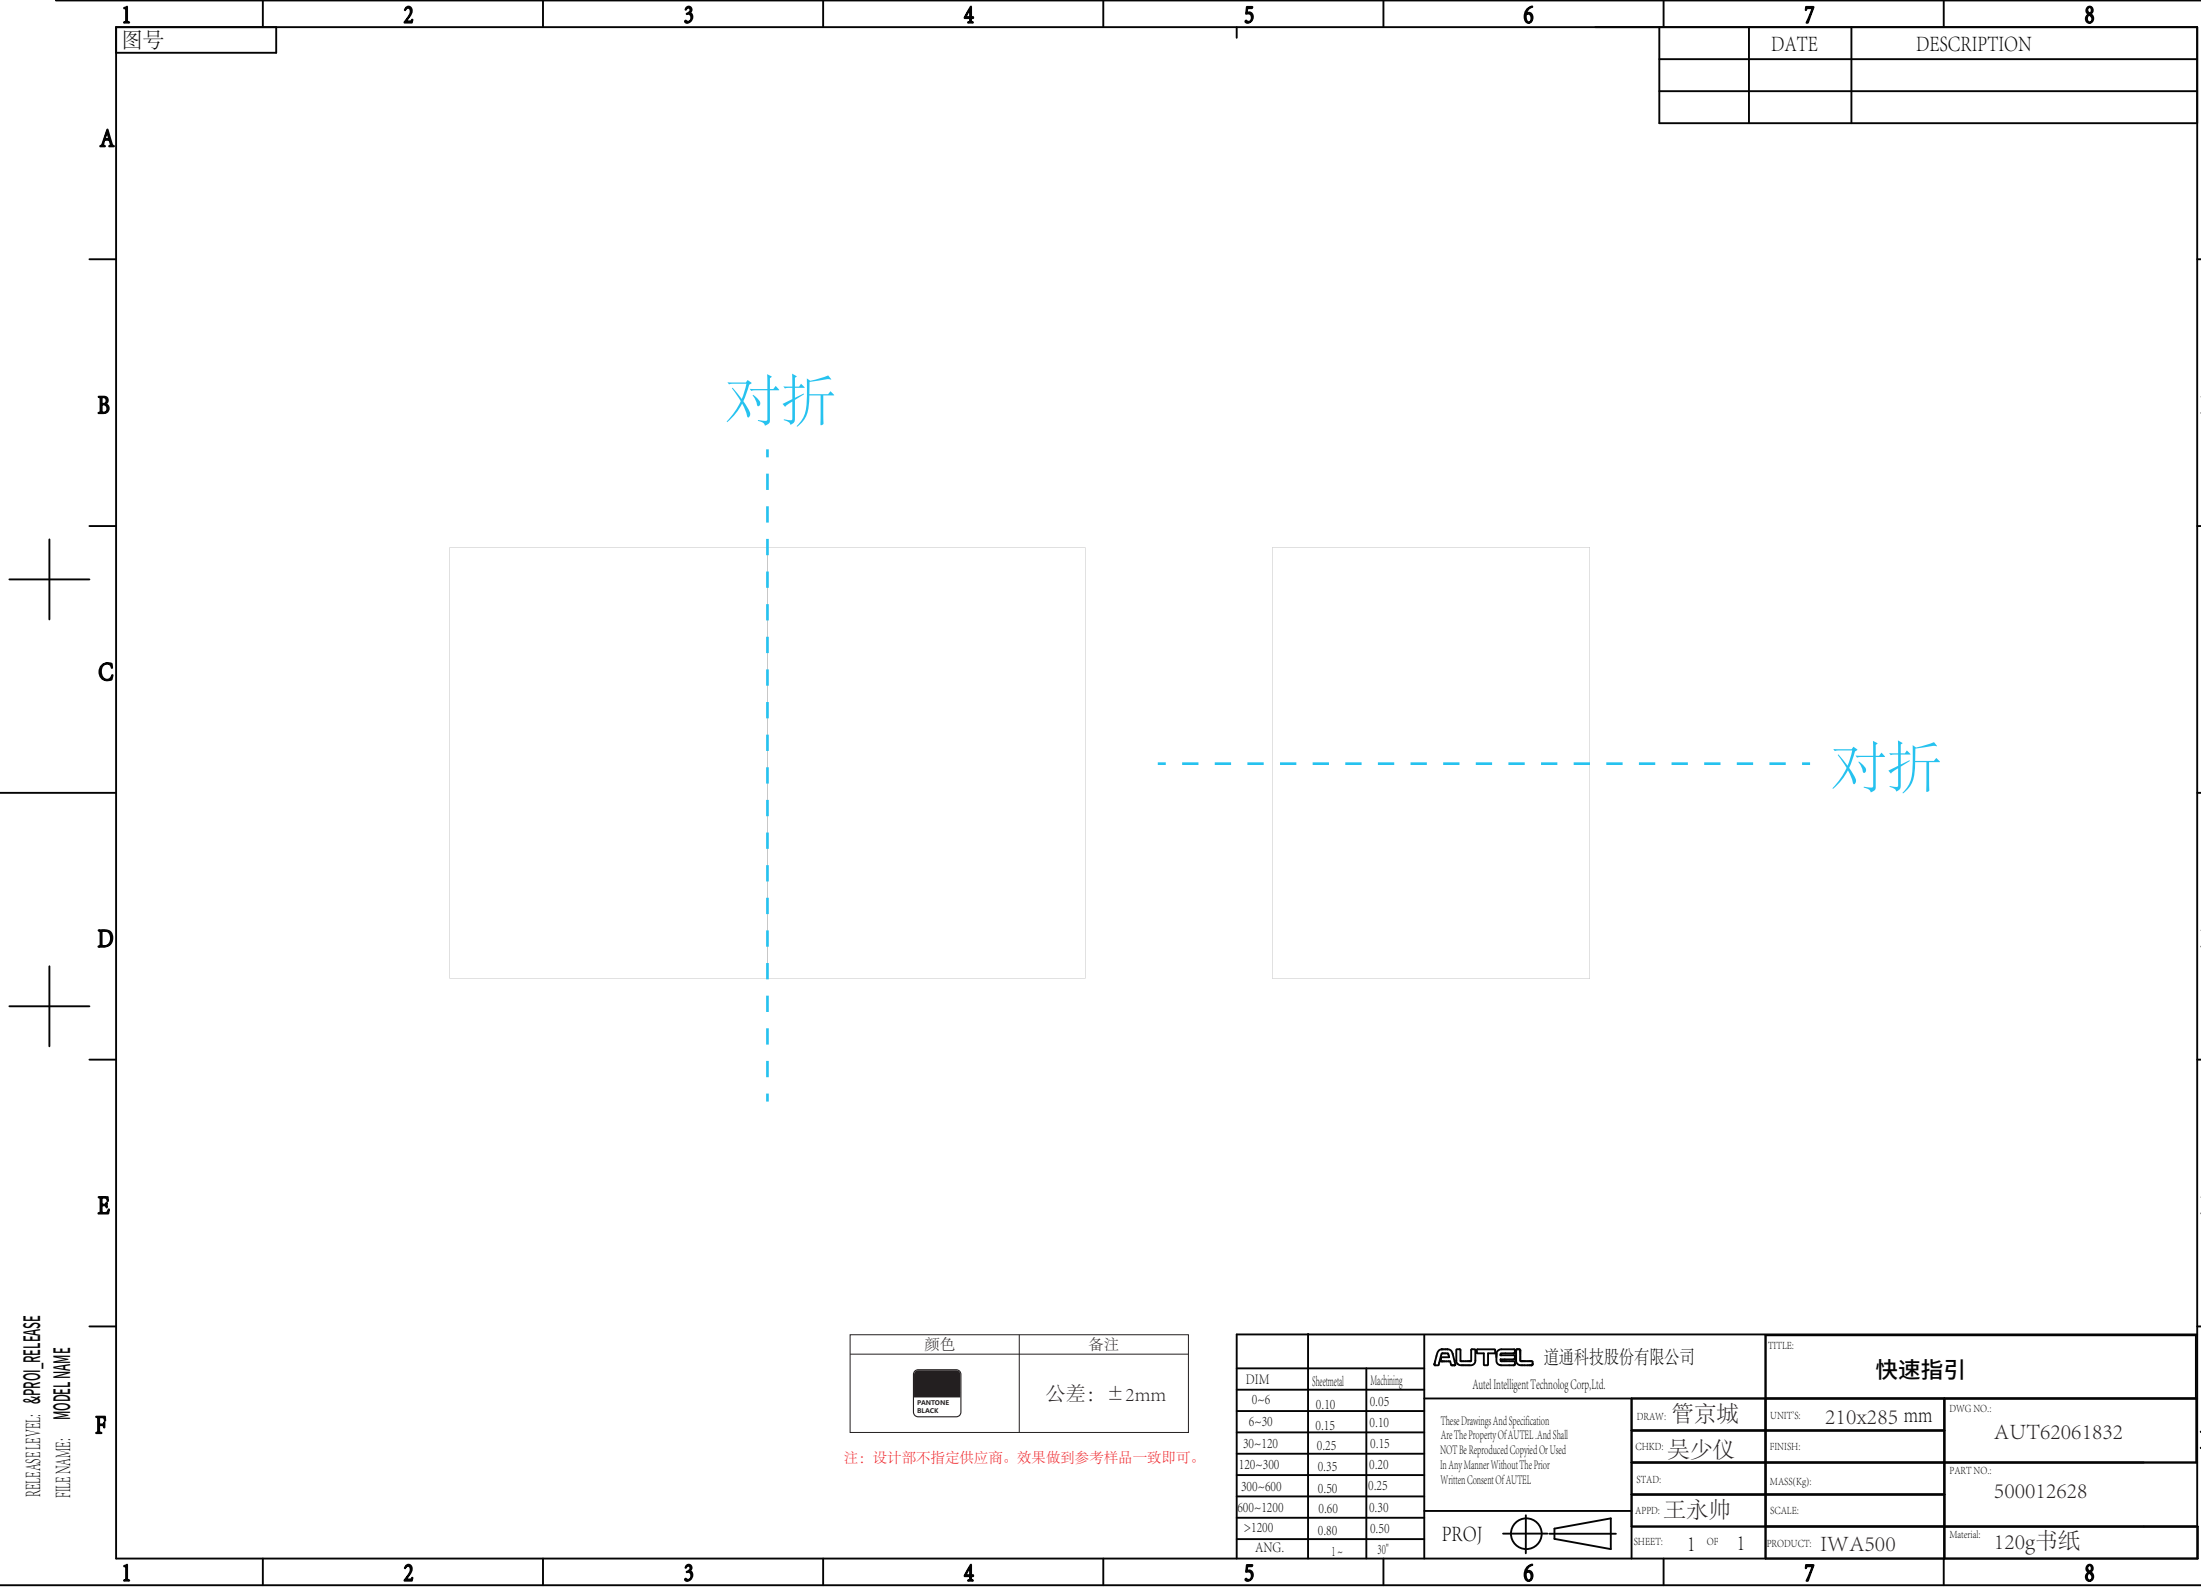

图号

DATE

DESCRIPTION

对折

对折

RELEASE LEVEL: &PROJ RELEASE
FILENAME: MODEL NAME

颜色

备注



公差: ±2mm

注: 设计部不指定供应商。效果做到参考样品一致即可。

DIM	Sheetmetal	Machining
0~6	0.10	0.05
6~30	0.15	0.10
30~120	0.25	0.15
120~300	0.35	0.20
300~600	0.50	0.25
600~1200	0.60	0.30
>1200	0.80	0.50
ANG.	1~	30°

AUTEL 道通科技股份有限公司
Autel Intelligent Technology Corp.Ltd.

These Drawings And Specification
Are The Property Of AUTEL And Shall
NOT Be Reproduced Copied Or Used
In Any Manner Without The Prior
Written Consent Of AUTEL

PROJ



TITLE

快速指引

DRAW: 管京城

UNIT'S: 210x285 mm

DWG NO: AUT62061832

CHKD: 吴少仪

FINISH:

PART NO: 500012628

STAD:

MASS(Kg):

APPL: 王永帅

SCALE:

SHEET: 1 OF 1

PRODUCT: IWA500

Material: 120g书纸